



DIGI-DRY - AUTO SHUTOFF

ORIGINAL DOCUMENT

Slide the Auto Shut-Off Heat Control unit over square tube on the cord side of the heater. Plug the Digi-Dri into receptacle cord of control box.

The Digi-Dri can be used with or without the Auto Shut-Off feature enabled.

- Setting the DRYER Control Switch to **OFF** will turn off power to the dryer.
- DRYER Control Switch set to **ON** will operate the dryer without the Auto Shut-Off feature enabled.
- Press and rotate the Temperature Control to desired setting, **0 – 100**.
- BBC recommends a starting point of **70**. Adjust for desired results.

Auto Shut-Off Timer instructions:

1. Switch the DRYER control to **ON**. (The timer cannot be set with the DRYER control set to **AUTO** or **OFF**).
2. Set the first field on the Timer Setting to **N**.
3. Set the last field on the Timer Setting to **M**.
4. The three fields in the center of the Timer now denote **HRS-MIN-MIN**. (Ex: a setting of 1 – 3 – 3 will time as 1 hour, 33 minutes). Set the Timer for your application.
5. Switch the DRYER switch to **AUTO**. Your heater is now powered and will begin heating.
6. Allow approximately 5 – 10 minutes for the *Digi-Dri* to initially "warm-up".
7. Switch the TIMER control switch to **RUN** to begin timer countdown. The countdown can be paused without resetting the timer by switching the TIMER control switch to **PAUSE**. Switch back to **RUN** to resume countdown.

After the countdown is completed, power to the Heater will be switched off. Switch the TIMER control switch to **RESET** and the countdown will reset, and the **HEATER WILL BE ENERGIZED**. Switch the DRYER control switch to **OFF** to deenergize the Heater.

See your *Digi-Dri* user manual for applicable **WARNINGS**.

Please contact the service department at *BBC Industries* (800-654-4205) or service@bbcind.com with any questions regarding these instructions.

